



Mist Maker Maintenance & Ceramic disc with key replacement

After operating the mist unit for some time, you may notice a decrease in the amount of mist produced, or it may stop working altogether. At that time, you should either clean or replace the ceramic disc.

There are two different size mist ceramic disks on the market, a big one, size is 20mm (about 3/4 inch), a smaller one is 16mm (little less than 5/8 inch), make sure you get the right one for your fountain.

Follow the instruction below to change the ceramic disc

- 1. Unplug the fountain power and remove fogger from the water bowl, dry it with a soft cloth.**
- 2. Using the key tool, insert the key into the winding ring and turn counter clockwise.**
- 3. Remove the filler piece (washer) and ceramic disc. IMPORTANT, note that there is a front and back to the ceramic disc. Be sure to reinstall the correct side up, black colour side facing up.**
- 4. Clean mineral deposits from the ceramic with a soft cloth and reinstall it or proceed to install a new ceramic disk in the reverse order of the above.**
- 5. The inside area of the fountain bowl must be completely dry before the parts are installed.**